

AUTOMATIC TRANSAXLE FLUID (ATF)




Replacement guideline

		Interval	
Severe driving condition	30,000 km	2 years	*whichever comes first
Normal driving condition	165,000 km	-	

Purpose and Function

In order to transfer the revolutions and power generated by the engine to the tires, ATF provides the smooth driving across the whole range from low to high speed.

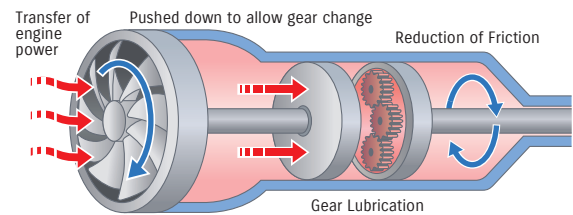

If overused without replacement ...

- It may cause shift shock.